


Šatní skříň

Annie




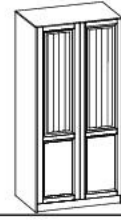


	900
	2200
	612


A x12	B x12	C x8	D x8	E x4	F 3,5x16 x42	G M4x30 x2	J x2	U x4	Y x4
K x18	L 7x50 x4	M x4	N x8	O x6	P x56	S x6	T x4	X L-861 x2	Z L-868 x3
a x1	b x2	c M4x25 x2	b x4						

	0h120min		600mm	0.5kg	3m			







①	633010.001	1	2
②	633020.001	1	2
③	633060.002	1	1
④	633060.001	1	1
⑤	633060.003	2	1
⑥	401004.003	1	1
⑦	633060.005	4	1
⑧	401006.001	1	1
⑨	642280.000	1	3
⑩	642290.000	1	3

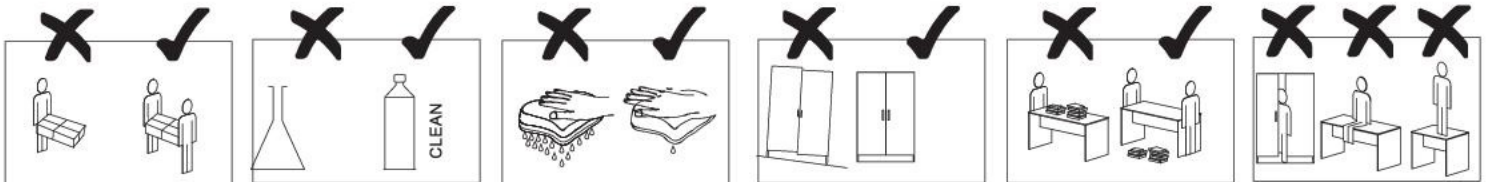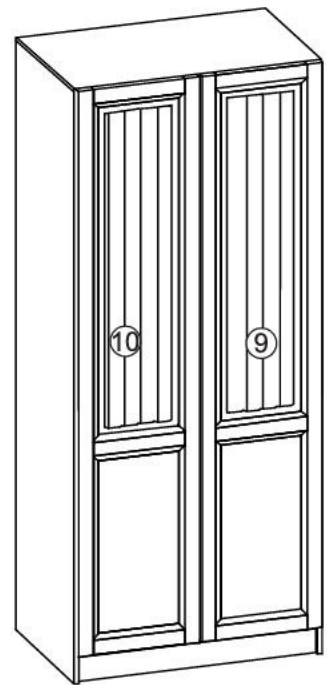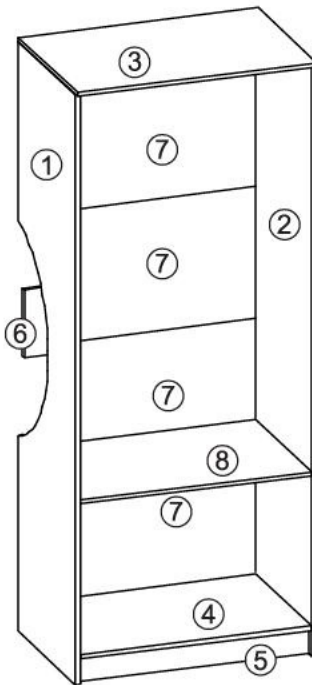

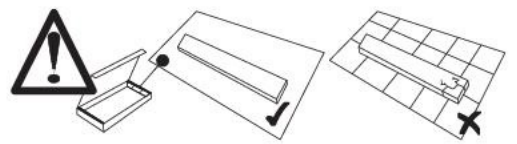











A x12	B x16	D x8	M x4	N x8	T x4





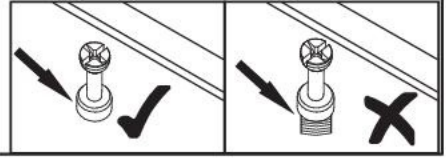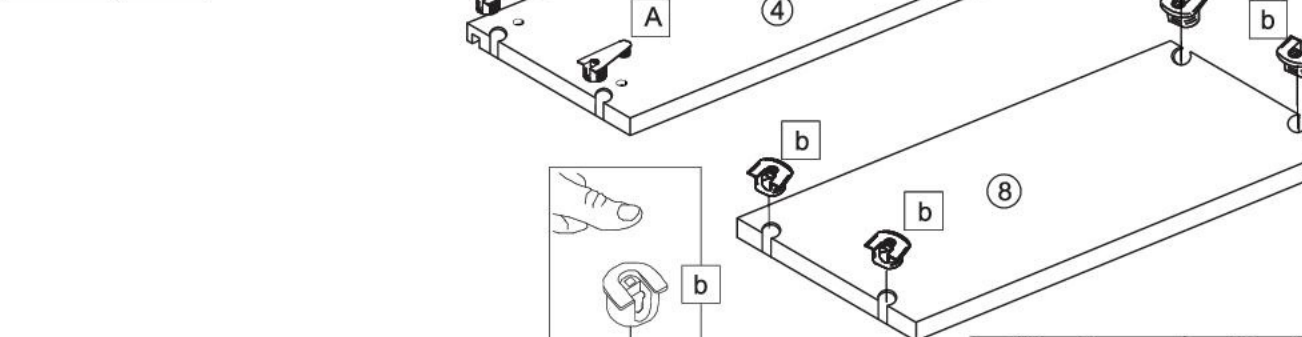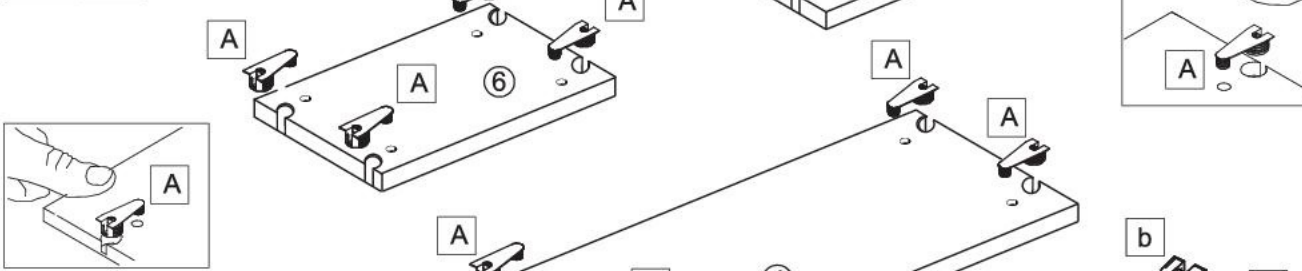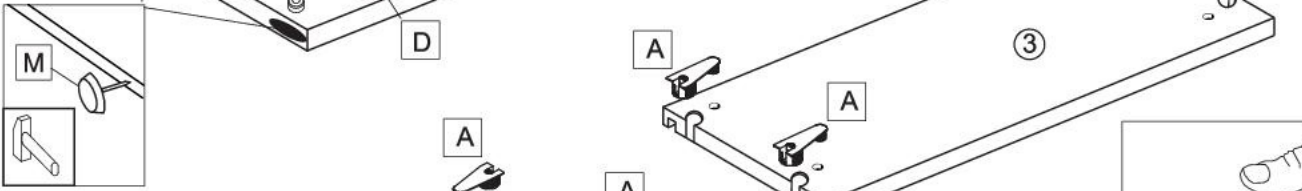
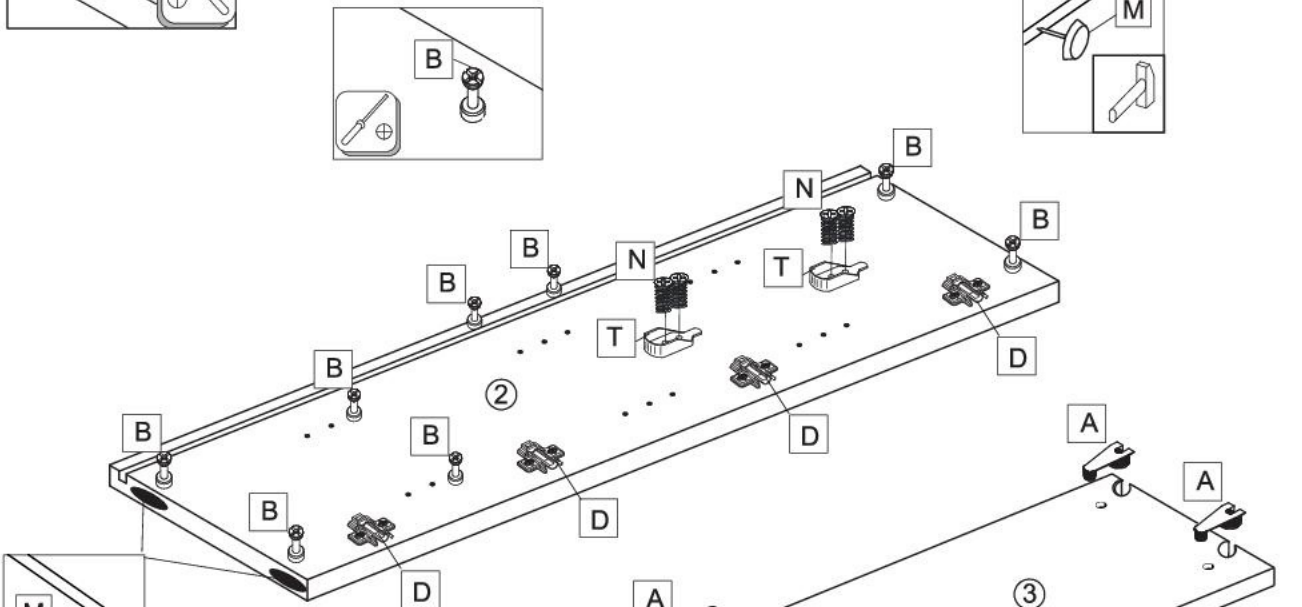
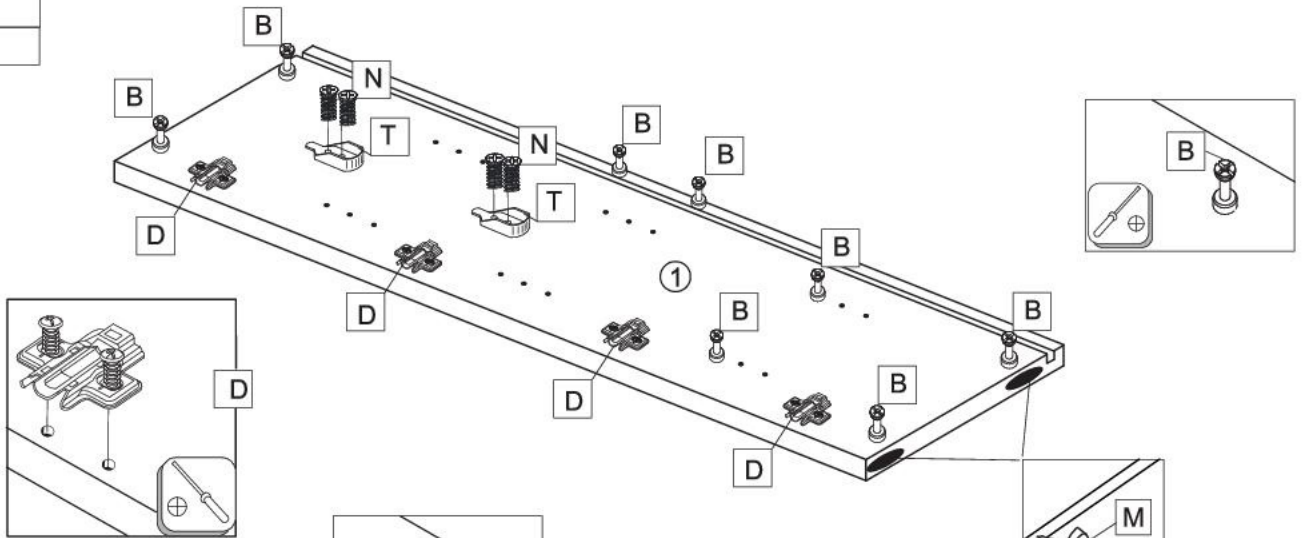
b x4




	7x50		L=868
L	x4	Z	x3

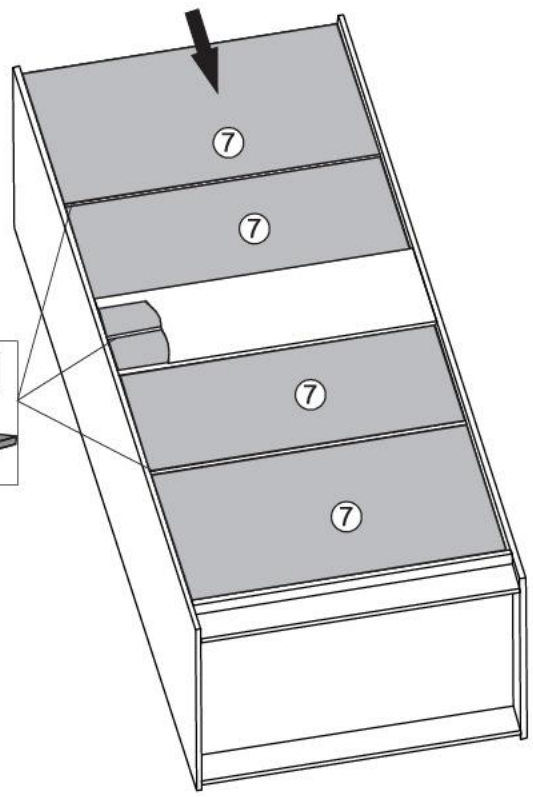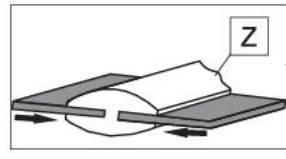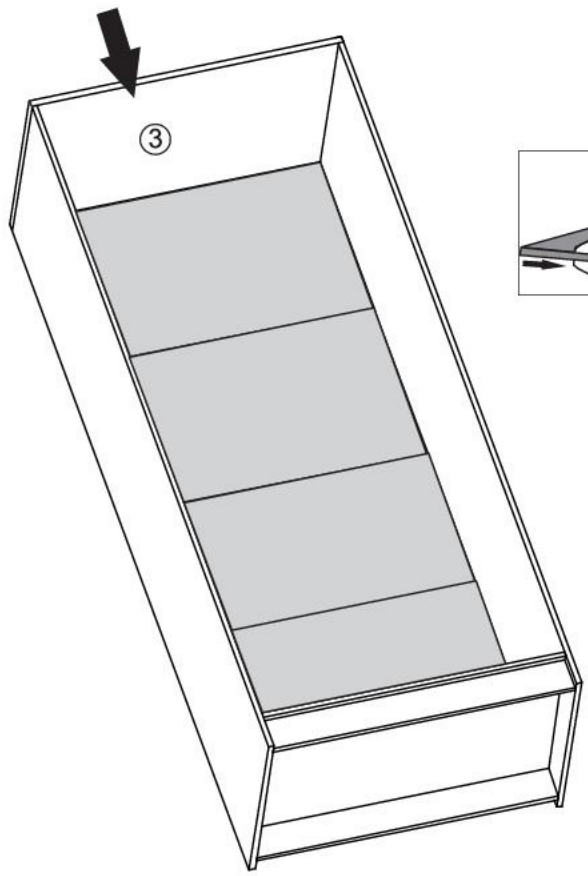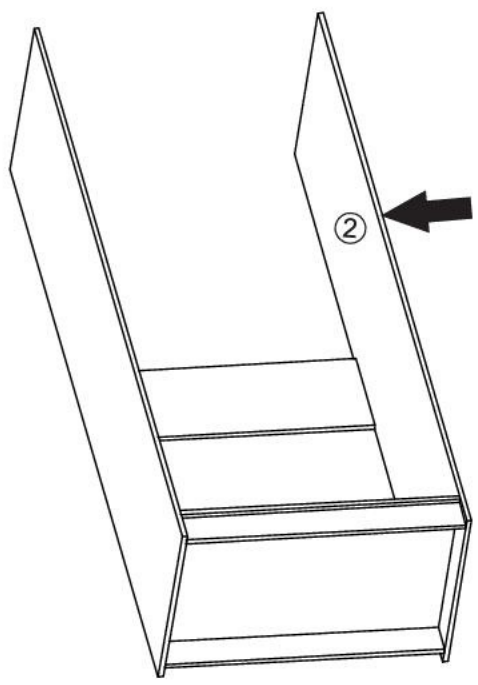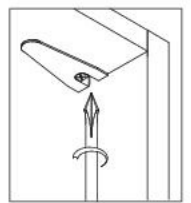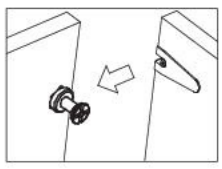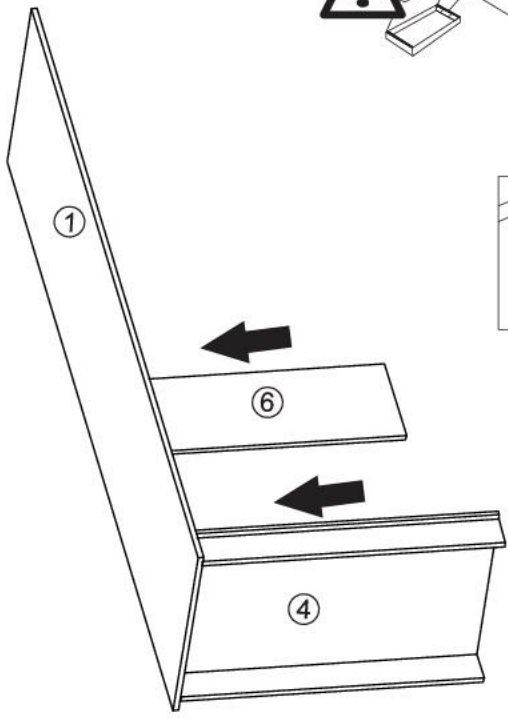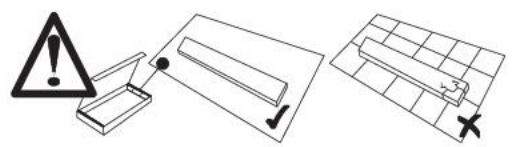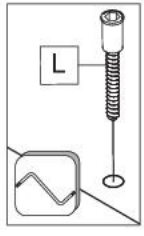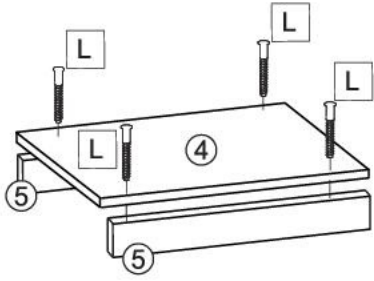

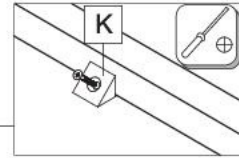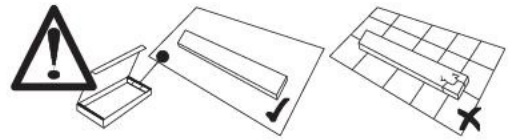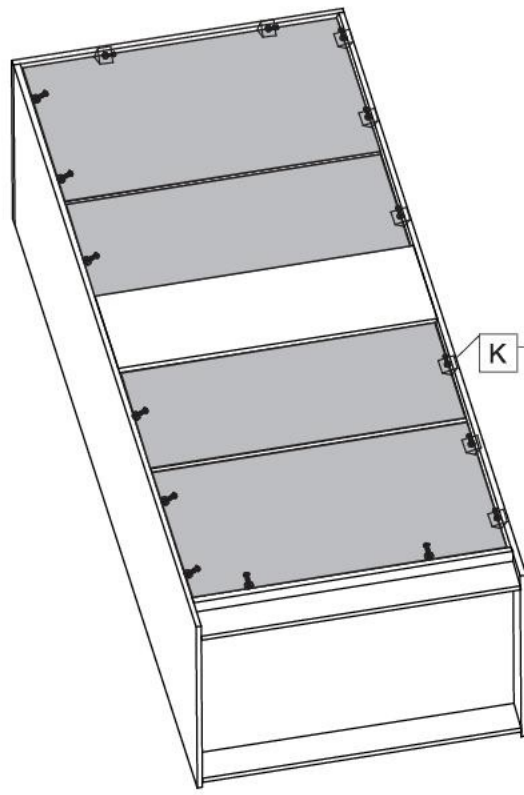



 + 
3,5x20
K x18









O x6


Execution 1

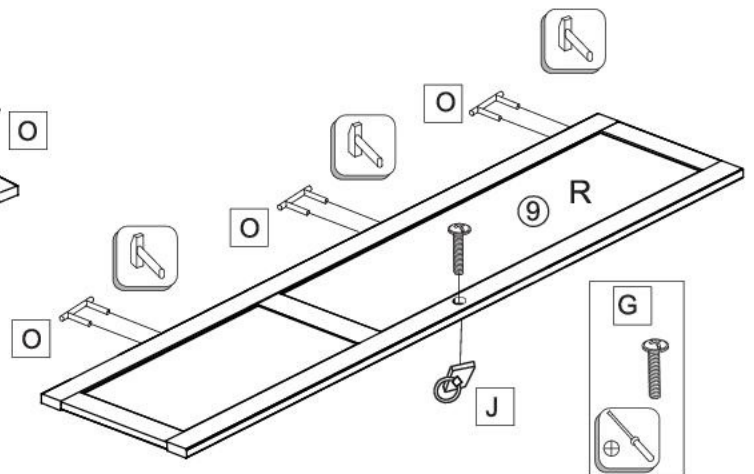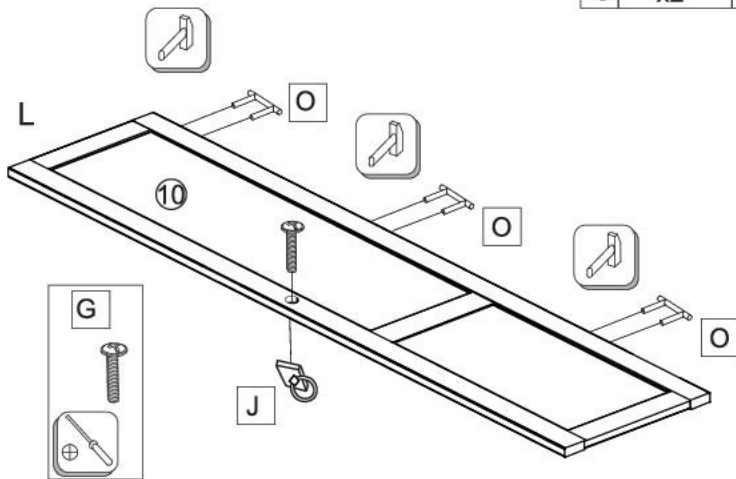	
M4x30	
G x2	J x2







		
C x8	3,5x16 F x16	E x4

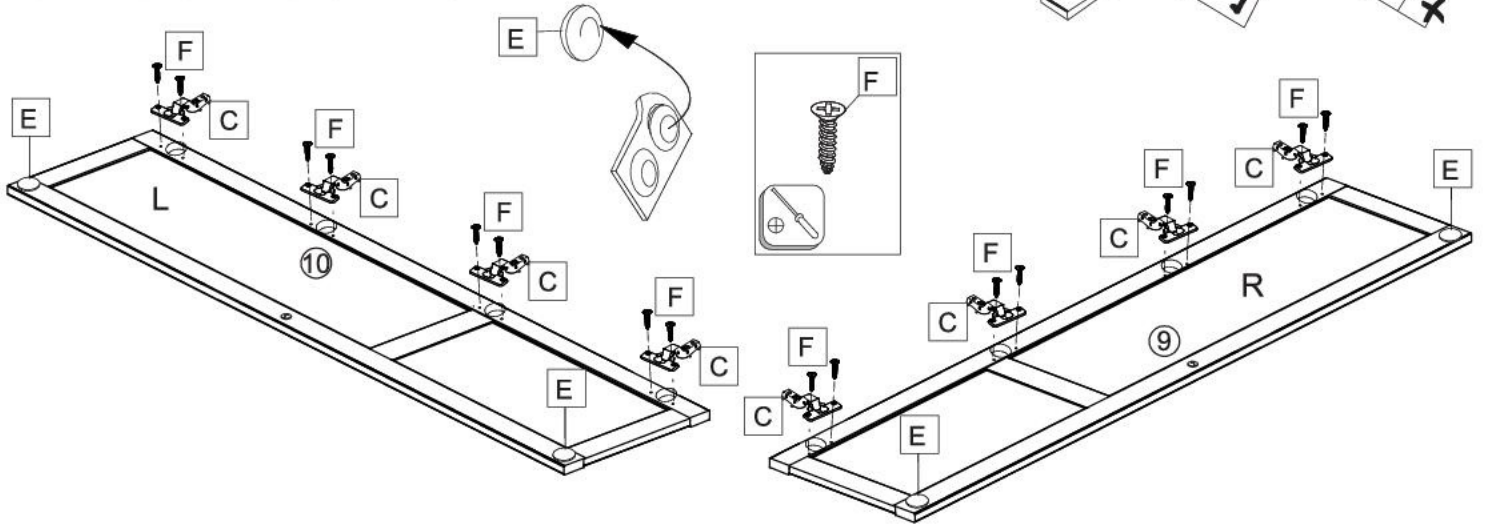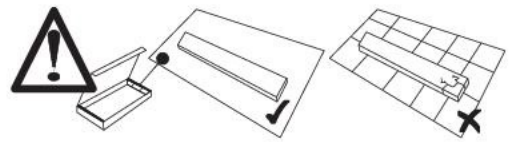






O x6

Execution 2,3


	
b x2	M4x25 c x2

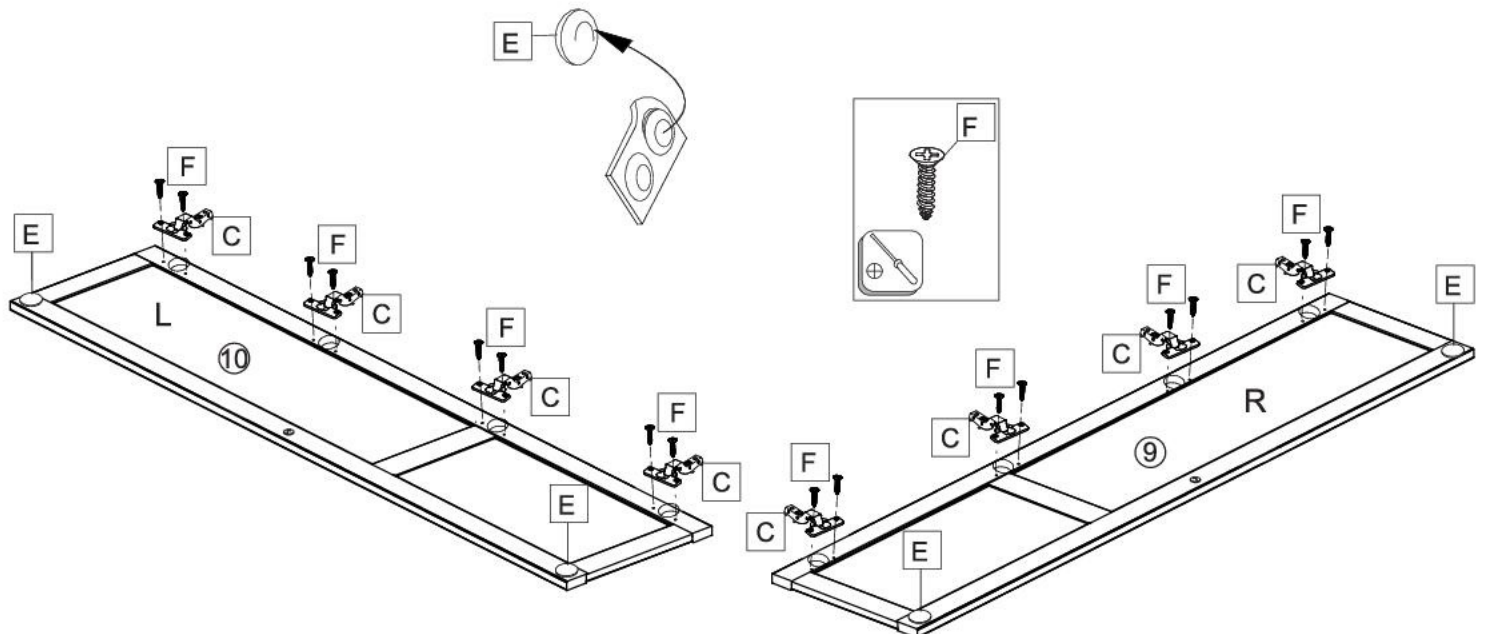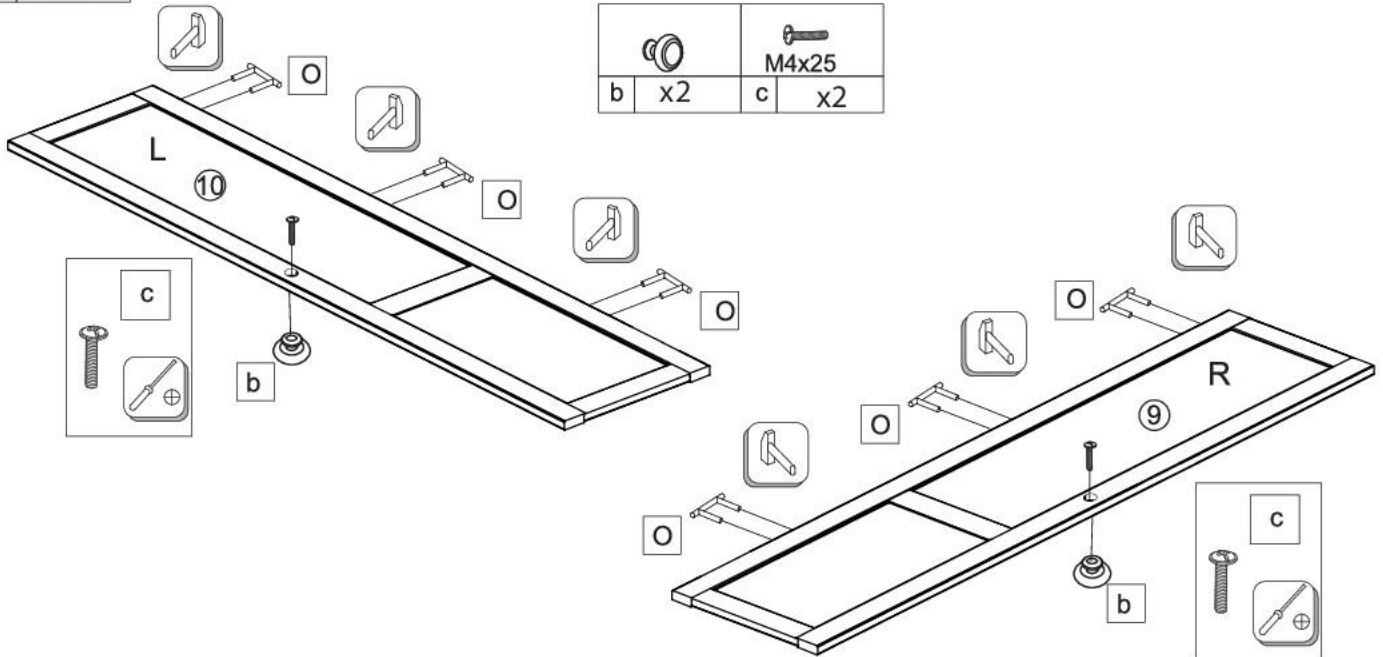



		$\varnothing 5$	L-861
Y x4	U x4	P x56	X x2

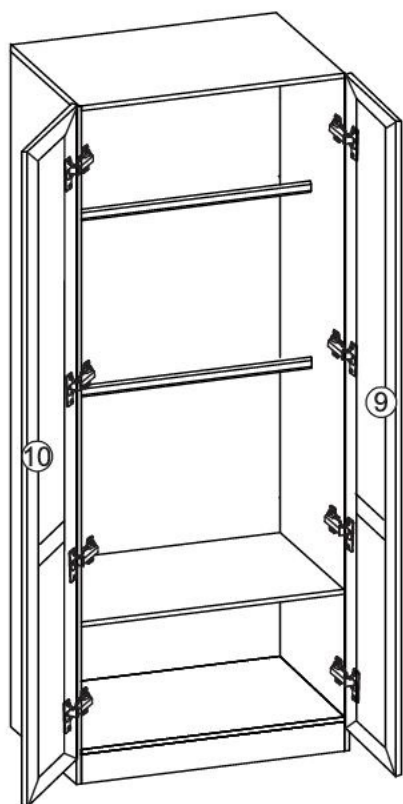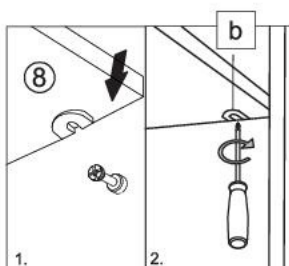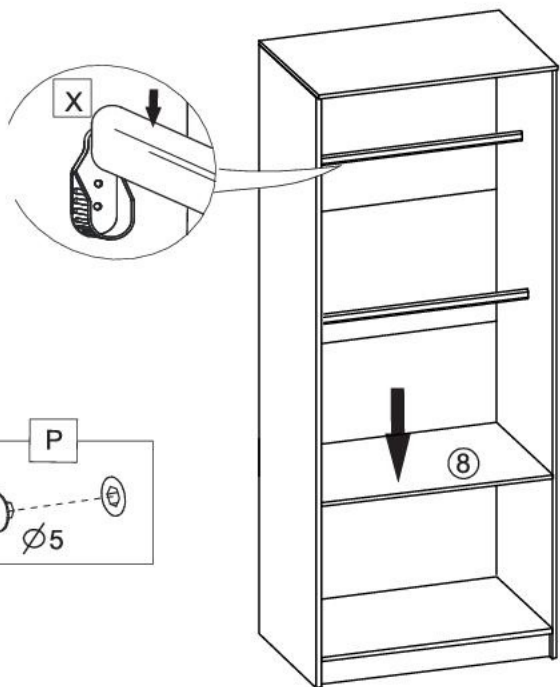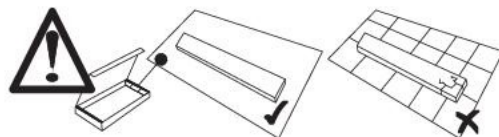









Монтаж

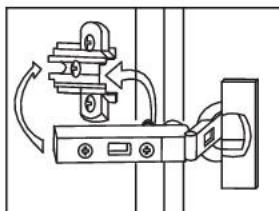

Демонтаж

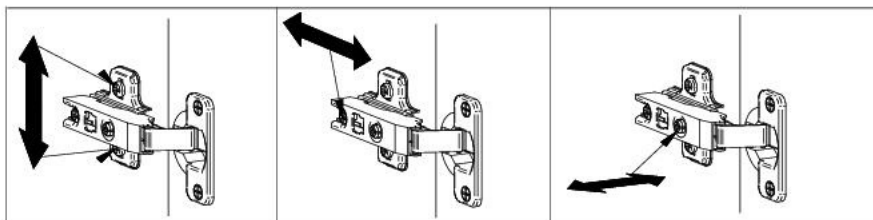
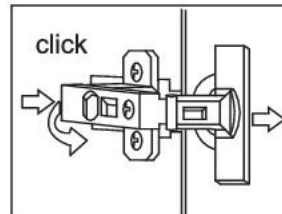


	
3,5x16	
F	x2
a	x1

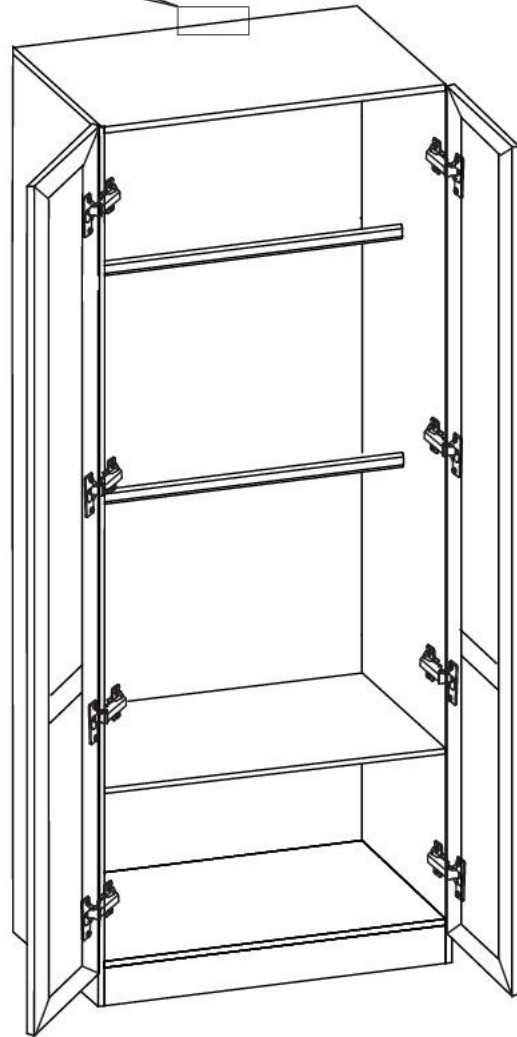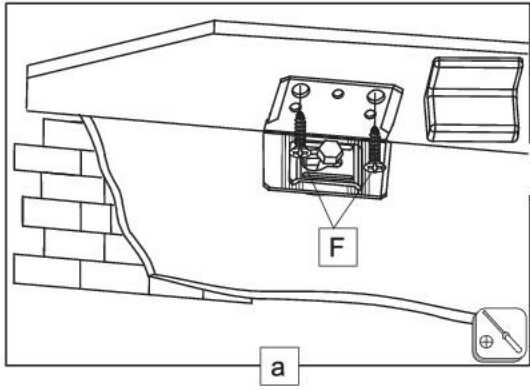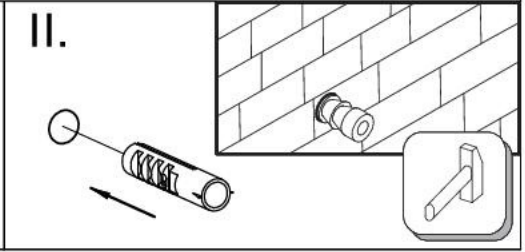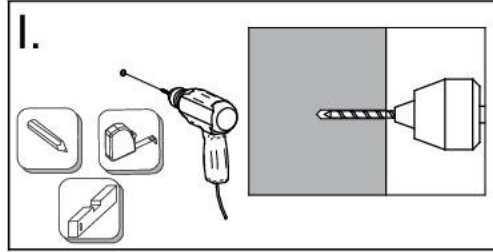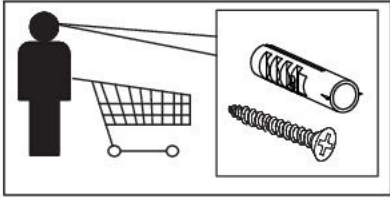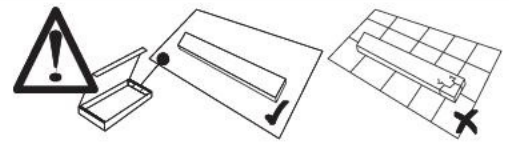



(Option)

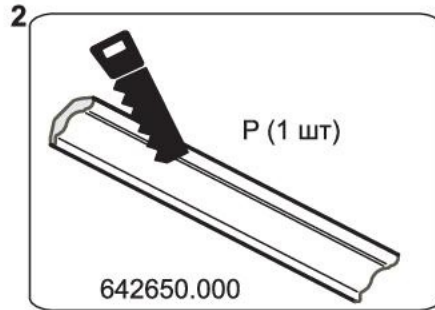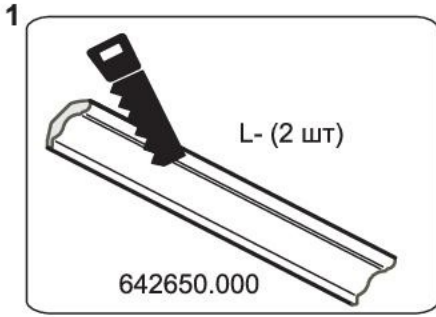

3,5x16	
F x26	S x6

